




Ensemble de chargeur Charger kit



User Manual

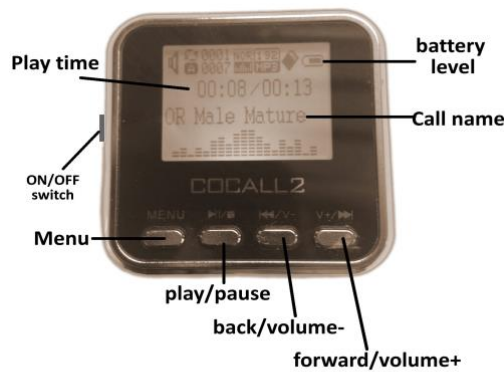

First use :

To access the system's option, there must be no card in the reader. Cocall 2 has two audio sources : MP3(Micro SD port) and Audio input. To go from a source to another, use MENU and press the ARROW buttons to select.

How to listen to MP3s :

Insert a card into your Cocall and put the " On/Off " switch to ON. The Cocall will start playing automatically. To play a different sound, press on the ARROW buttons. To put your Cocall on pause or on play, press on PLAY/PAUSE button

How to raise/lower the volume :

Press and hold the ARROW buttons to adjust the volume.

How to recharge the battery

Plug your Cocall with the charger included. The screen will show in the right corner if your Cocall is fully charged or not. The cocall is not necessary to ON for charging, The charging time is of 2 to 3 hrs.

How to change the lighting's duration :

Press on MENU and use the ARROW buttons to select BACKLIGHT in options. Note : When the backlight is off, you have to press on any button to make it light up again. You can choice between 3 to 30 seconds.

How to change the language :

Press on MENU and use the ARROW buttons to choose the desired language, English or French.

How to change the reading mode : While the call is playing press on MENU and select CYCLE MODE and press on MENU. Select the desired mode using and press on MENU to confirm. The recommended mode for hunting is REPEAT ONE (this mode only plays and repeat the call you have selected).

Principal menu interface :

The principal menu has 4 applications. Calendar, Music, Line in and system settings.



Use MENU and press the ARROW buttons to select.

More videos are also available online at

WWW.COCALL.CA