



Ensemble de chargeur Charger kit



Mode d'emploi Cocall 2X

 
Ouvrir et Fermer le Cocall 2X
Maintenir le Bouton MENU pendant 3 secondes



Prise en main


Recharger la batterie

Branchez le Cocall 2X avec le fil fourni dans une connexion USB. L'écran affiche une Batterie et le niveau de charge.
Charge la Batterie avant l'utilisation.

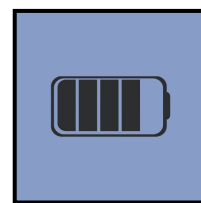


Le Cocall 2X dispose de 2 sources audio :

 - Cocall : Lecteur de Carte
- Télécommande : Utilisation du RC100M

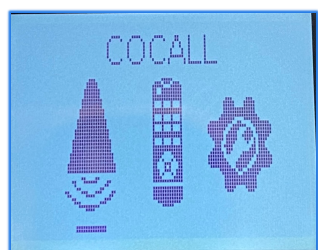

Monter/Baisser le volume

 
Appuyez et maintenir les FLÈCHES pour le contrôle du volume.
Niveau de volume

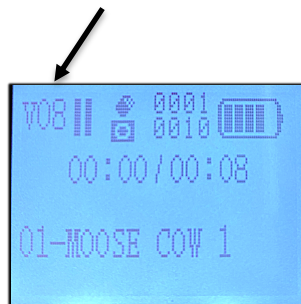

Paramètres

Accéder au paramètres
Pour modifier :

 - Rétroéclairage
- Langage
- Contraste

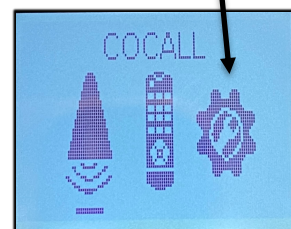

Choisir et Appuyer MENU pour sélectionner.

 
Changer le mode de Lecture

En mode Cocall , Appuyer MENU et sélectionner MODE DE LECTURE

- Typique : *Joue un son après l'autre*
- Répétez : *Répète le même son*
- Une Fois : *Joue une fois et arrête*

Interface du menu principal

Le menu principal comporte 3 applications.

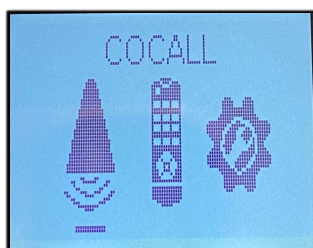

Son Inclus

1. Femelle Orignal 1
2. Femelle Orignal 2
3. Femelle Orignal 3
4. Femelle Orignal 4
5. Femelle Orignal 5
6. Male Mature Orignal
7. Ébrouement Orignal
8. Femelle Chevreuil
9. Rot Male Chevreuil 1
10. Rot Male Chevreuil 2

Plusieurs vidéos explicatifs disponibles au
WWW.COCALL.CA



Ensemble de chargeur Charger kit



User Manual

 
Turn On or OFF Cocall 2X
Press and hold MENU for 3 second



Getting started


Battery Charging

Connect the Cocall 2X to USB connector with included wire. The Screen will be showing the battery level. Charging fully before use it.

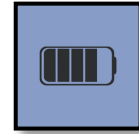

The Cocall 2X has 2 audio sources

 - Cocall : Card Reader
- Remote control : Line in

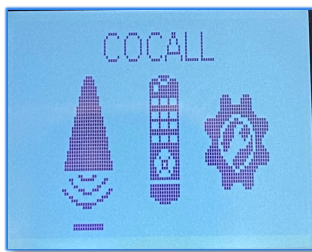


Press MENU to select

Volume Control

Press and hold V+ or V- to control volume up or down.

 
Volume Level indicator

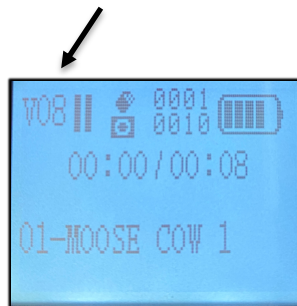

Setup

Settings menu

 - Backlight
- Language
- Contrast

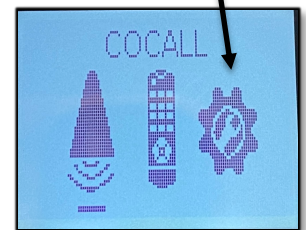


Card playing mode (Cycle mode)

In Cocall mode Press MENU, then select cycle mode to access 3 card playing modes.

- Normal: *Cycles through all programed calls on card.*
- Repeat one: *Plays one selected call on repeat.*
- ONE: *Plays one selected call once and stops.*

Menu Screen

 The menu screen has 3 selection options.

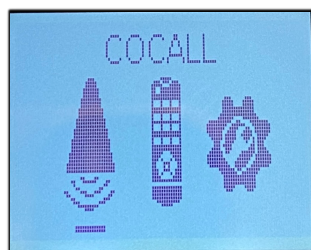

Sounds Included

1. Cow moose 1
2. Cow moose 2
3. Cow moose 3
4. Cow moose 4
5. Cow moose 5
6. Big bull moose
7. Moose Snort
8. White-tail doe
9. Rutting buck 1
10. Rutting buck 2

**For more product information
check out our website.
WWW.COCALL.CA**